



NOTE:

THERE ARE TWO WAYS TO RESET THE COUNTER:

1. REMOVE AND REPLACE THE BATTERY.
2. ADD AN EXTERNAL RESET SWITCH.
  - A. SOLDER A WIRE WHERE NOTED ON THIS DRAWING
  - B. CONNECT A NORMALLY OPEN SWITCH BETWEEN THE NEWLY SOLDERED WIRE AND THE BLACK WIRE.

**FieldPix**  
*Game Camera Systems*

|            |          |  |          |
|------------|----------|--|----------|
| SIZE       | FSCM NO. | DWG NO. TRUMETER 7010/7016<br>COUNTER INSTALLATION | REV<br>0 |
| SCALE NONE |          | SHEET  |          |